

ALLBROX® 4-6

Inner Doors




Allbrox® Inner Door

| Part Number | Description |
|-----------------|----------------------|
| ALL-004/IN/DOOR | Allbrox 4 Inner Door |
| ALL-005/IN/DOOR | Allbrox 5 Inner Door |
| ALL-006/IN/DOOR | Allbrox 6 Inner Door |

Allbrox® with PC Window

| Part Number | Description |
|-----------------|---|
| ALL-003/CLEARPC | Allbrox 3 with clear Polycarbonate window |
| ALL-004/CLEARPC | Allbrox 4 with clear Polycarbonate window |
| ALL-005/CLEARPC | Allbrox 5 with clear Polycarbonate window |
| ALL-006/CLEARPC | Allbrox 6 with clear Polycarbonate window |

Allbrox® Inner Door Fitting Options

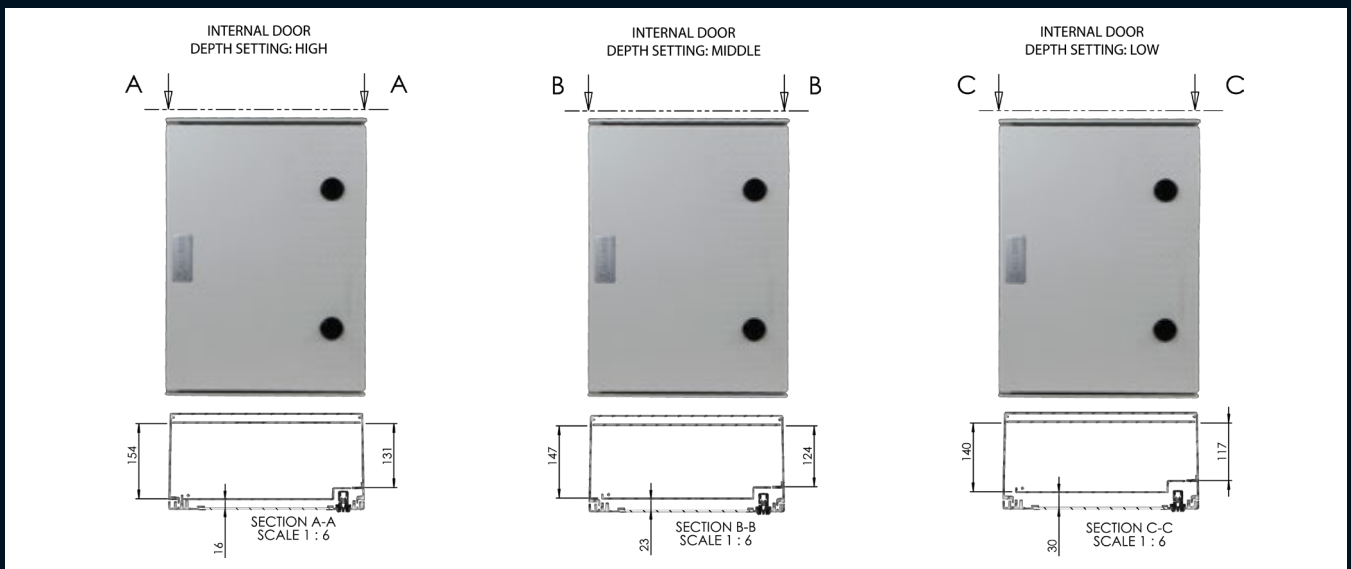

1) To remove or place the inner door in an Allbrox® simply pull the two hinge pins as indicated towards each other.



2.1) To remove the door, complete step 1 and pull the inner door towards yourself.

2.2) To place the inner door into the Allbrox® complete step 1 and let the hinge pins go once the pins are inline with the hinge sleeve.